





## PLEASE NOTE THAT YOU WILL NEED A SECOND ETHERNET / LAN CABLE VERY IMPORTANT: DO NOT REMOVE LAN CABLE CONNECTED BETWEEN YOUR ROUTER'S WAN PORT AND THE ONU

## Connect your router to your computer





Insert the one end of the LAN cable into one of the LAN ports on the back of the router

Insert the other end of the LAN cable into the LAN port on your computer

**STEP** 

1.2

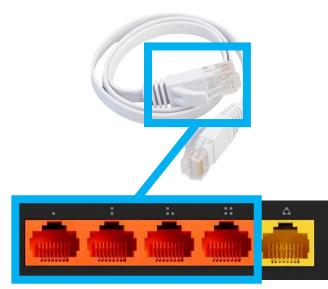

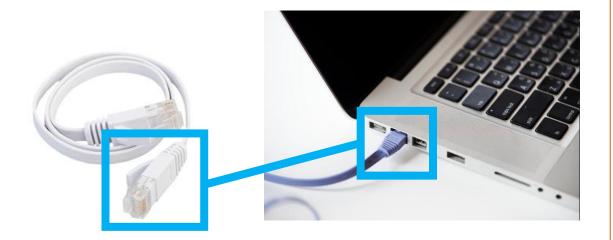








## Open your web browser and type in the router IP address into the URL

Please be sure not to Google the IP address, but type it into the URL as shown

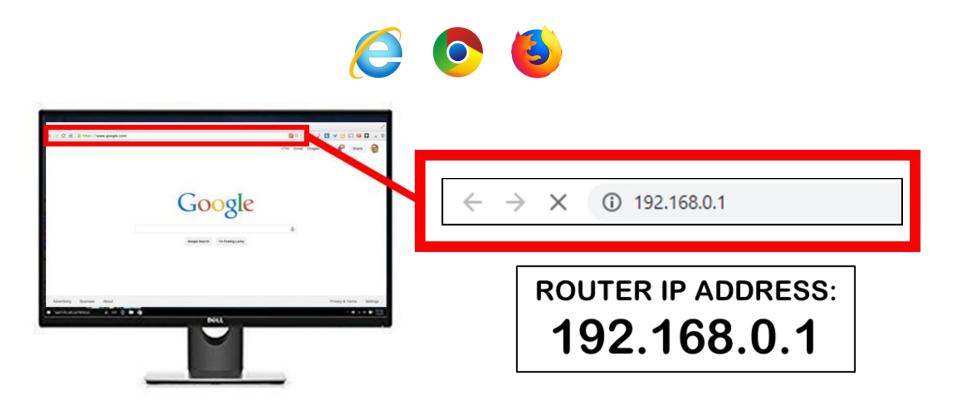

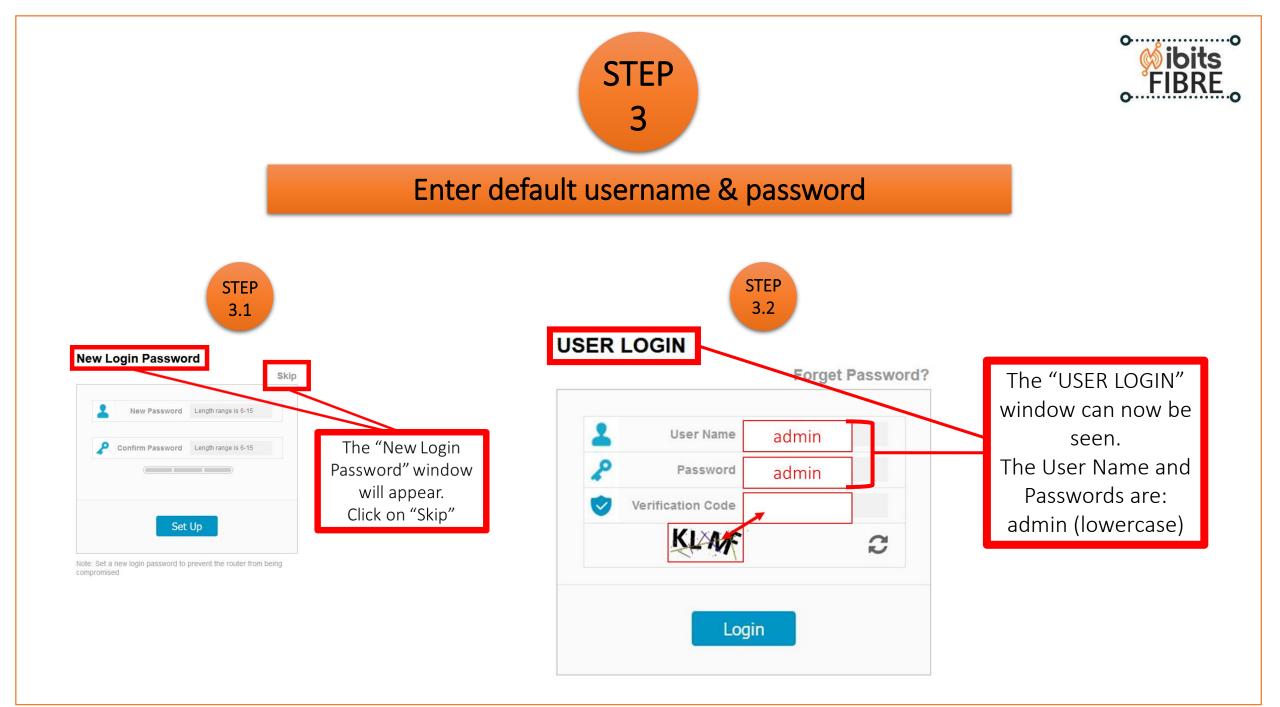

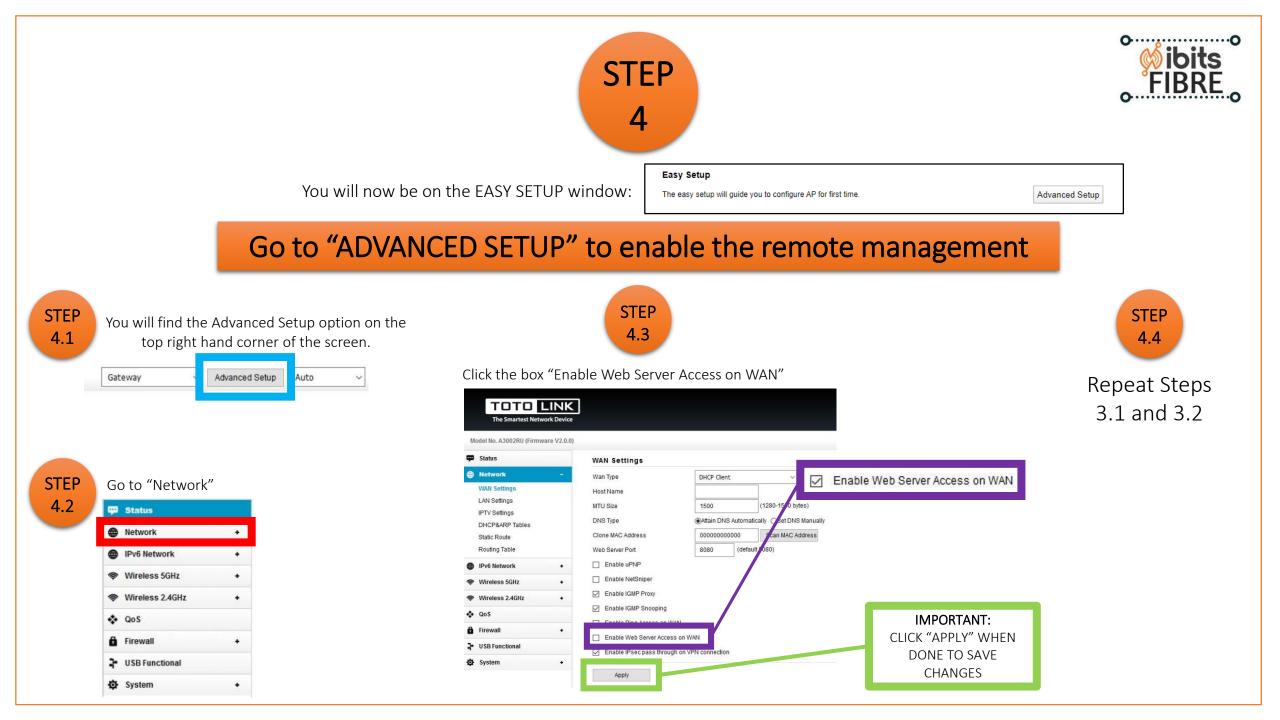

STE 5	P	<b>ibits</b> FIBRE
You will now again be on the EASY SETUP window:	Easy Setup The easy setup will guide you to configure AP for first time.	Advanced Setup

## Change the WAN Connection Type to "PPPOE" and fill in the username and password

Easy Setup				
	e you to configure AP for first time.	Advanced Setup		
-Connection Status-				
- Connection Status-	Connection Status DHCP Disconnected			
Internet Setting			DHCP	-
	WAN Connection Type DHCP -		Static IP	
	Static IP DHCP		DHCP	
5G Wireless	PPPoE Network Name(SSID PPTP		PPPoE	
	Password		РРТР	
	The Password length should be between 8-	63 bits	L2TP	
2.4G Wireless				
	Network Name(SSID) TOTOLINK_A3000RU Password			
	The Password length should be between 8-	63 bits		
		Apply		





You now have the option to change your Network Name (SSID) and password to what you would prefer

